


LENOXX

BLUETOOTH TOWER STEREO SYSTEM With USB/SD and PLL FM Radio

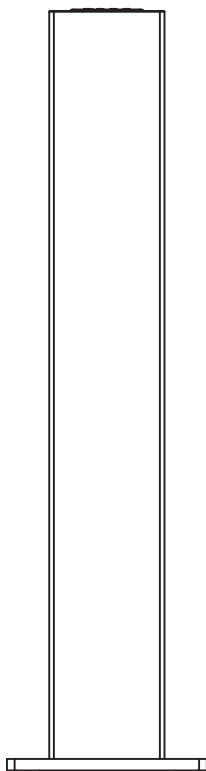

USER MANUAL
Model: TS9114

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

WARNINGS AND PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

• **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

• **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

• **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

• **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• **WARNING:** Do not place the unit on top

of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

• **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

• **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

• **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.

• **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

• **WARNING:** Shock hazard - Do Not Open.

Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main completely, the main plug should be disconnected from the main socket outlet completely.

IMPORTANT SAFETY INSTRUCTION

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of



time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main completely, the main plug should be disconnected from the main socket outlet completely.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.

FCC Warnings

This device complies with part 15 Of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

PACKAGE CONTENTS

When you unpack your new unit, make sure that you have removed all the accessories and information papers:

- Speaker tower
- User manual
- Remote Control
- 1 piece of Stereo audio connection cable with 3.5 stereo plug
- 2 pieces of Assembly screws / washers

INSTALLATION

1. Main Body
2. Wooden Base
3. Washers
4. Screws

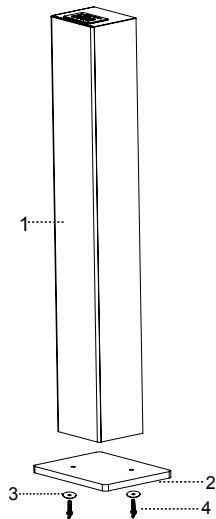


Fig. 1

5. Speaker Net
6. Remote Sensor
7. Tweeters
8. Loud Speakers
9. Woofer

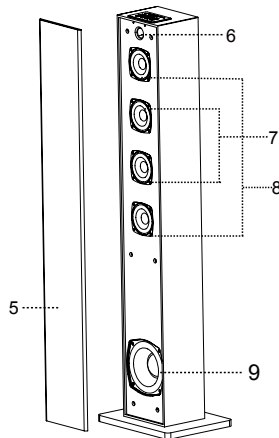


Fig. 2


Notes:

1. Assemble the wooden base to the main body with the supplied screws and washers as Fig. 1 above.
2. The speaker net can be taken out and reassembled as Fig. 2 above.

LOCATION AND DESCRIPTION OF CONTROLS



 
 
 
MAIN UNIT

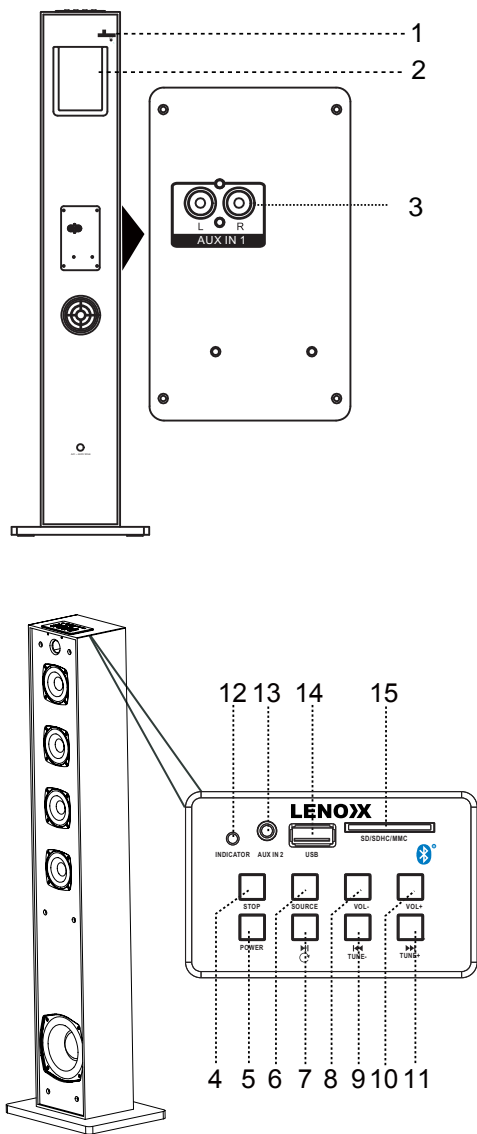
- | | |
|--------------------------------------|----------------------------------|
| 1. ANT (Antenna for FM Radio) | 9. ◀◀ / TUNE- Button |
| 2. Cloth Bag | 10. VOL+ Button |
| 3. AUX IN 1 input Jack (RCA) | 11. ▶▶ / TUNE+ Button |
| 4. STOP Button | 12. INDICATOR |
| 5. POWER Button | 13. AUX IN 2 Jack |
| 6. SOURCE Button | 14. USB Port |
| 7. ▶II / ⏻ Button | 15. SD/SDHC/MMC Card Slot |
| 8. VOL- Button | |



LOCATION AND DESCRIPTION OF CONTROLS

REMOTE CONTROL

1.  STANDBY Button
2.  (TUNE -) Button
3. **VOL** (Volume)+/- Buttons
4. **SOURCE** Button
5.  (MUTE) Button
6.  (TUNE+) Button
7.  (Play/Pause) Button
8. **STOP** Button
9. **FM SCAN** Button
10. **EQ** Button
11. Numeric Buttons

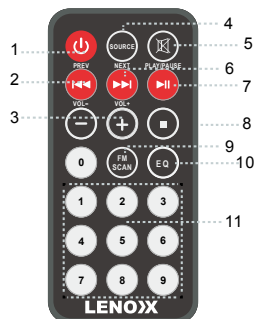


The remote control operates on 1pc “CR2025” lithium battery (included). To power up the remote control, remove the insulation tab from the back of unit.



Replacing battery for the remote control

1. Push and slide out the battery door.
2. Replace the battery with a new CR2025 button cell with the polarity “+” facing up.
3. Slide the cover back.

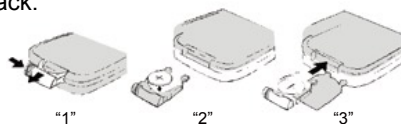

Notes on batteries

- Never recharge the batteries, apply heat to them or take them apart.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not throw the batteries in fire!
- Attention should be drawn to the environmental aspects of battery disposal.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

CAUTION:


Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

POWER SOURCE

Inert the AC plug into a conveniently located AC outlet having AC 240V~50Hz.


WARNING: This unit has a long AC cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

GENERAL OPERATION


1. Press  button to turn on or turn off the unit.
2. Press the **SOURCE** button repeatedly to select the playback source as desired. The indicator will turn Green (RADIO), Indigo (AUX IN 1), Light Blue (AUX IN 2), Deep Blue (Bluetooth), Violet (SD/SDHC/MMC card), Yellow (USB).

 

Note:

- If no USB device or CARD was inserted, USB or CARD mode cannot be selected by SOURCE button.


 
 

3. Press the **VOL(Volume)+/- Buttons** to adjust volume level.
4. Press the **EQ** button to set EQ (equalizers) mode as desired.
5. Press the  Button on the remote control to turn off the sound. Press it again to turn it back.
6. If the unit is not used for a long period of time, pull out the plug to turn off the unit completely.

PLAY RADIO

Press the  button to turn on the unit.

1. Press **SOURCE** button repeatedly until the Indicator color turns GREEN.
2. Press the **FM SCAN** button or press and hold  button and then the unit will start to search all available stations then stored into the memory automatically.
3. After finished FM SCAN, press numeric buttons then wait for approx 3 seconds, you can select 1-20 preset stations. eg: pressing "1", means preset station 1. pressing "2" + "0" means preset station 20. Or press  to cycle through and listen to the preset stations.


Note:

- You can also manually search for a station by pressing and hold  or  button to search for the available stations. The unit will stop when a station is found. Shortly the playback will begin.
- All the received stations by using  or  can not be stored into the memory.

To enhance radio reception ability:


FM: Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.

LISTENING TO AUXILIARY SOURCE







1. Connect your auxiliary source (e.g. TV, DVD, VCR player) to the AUX IN 1 jack (RCA). Or connect your auxiliary source (e.g. iPod / iPad / MP3 player) to the AUX IN 2 jack (3.5mm).
2. Press  button to turn on the unit. Press the **SOURCE** Button repeatedly until the color of Indicator turns to Indigo (AUX IN 1) and Light Blue (AUX IN 2).
3. Start playback from your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX jack.

USB OR SD CARD PLAYBACK

You can connect a USB flash drive (not included) to the USB port or a SD/SDHC/MMC (not included) to the memory expansion card slot on the unit to play MP3 files.

1. Press  button to turn on the unit. Insert the USB or SD/SDHC/MMC card, the indicator turns Yellow(USB) and Violet (SD/SDHC/MMC card). Wait for a few seconds, the unit will play the music files automatically.


Note:

- USB and SD/SDHC/MMC card sources will be automatically selected when inserted in.
2. Press  to suspend momentarily the playing track. Press  again to resume playing.
 3. Press  button to skip forward to next track and  to skip backward to previous track. Press and hold  or  to search quickly within a track.
 4. Using numeric buttons to your desired track. eg: pressing “1”, means track 1. pressing “2”+“0”+“9 means track 209.

Note:

- Supporting format: MP3 (32kbps-320kbps)
- The total number of MP3 files on the Memory Device should not exceed 999.
- If you can not easily insert the memory card, you may have inserted it incorrectly. Try to turn over the card and then insert again.
- For playing files on USB flash drive or SD card, you should plug in the USB flash drive or SD card when the unit is in standby mode.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
- Some SD cards may be incompatible.

BLUETOOTH PAIRING & LINKING OPERATION





1. Turn off the Bluetooth functionality of other devices that were paired with your unit.
2. Press  button to turn on the unit.
3. Press **SOURCE** button to select Bluetooth mode. The Bluetooth indicator will turn Deep Blue.
4. Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity and make your device “discoverable”.
5. Clean out the pairing list on your Bluetooth device.
6. Choose “add a new Bluetooth device” or “setup Bluetooth device” on your device. It will start to search. Once “TS9114” shows on your device, select it. If your device prompts you for a pass code, please enter 0000. If the pairing attempt fails or times out, please start pairing procedure again (see steps 2-6).
7. After your device and the “TS9114” have connected each other, a “Beep” sound can be heard.

Note:


- The unit will automatically reconnect the last used device if the device is in Bluetooth mode and back to the effective distance again.

Play MUSIC from Bluetooth devices.

Make sure the Bluetooth connection between the unit and the device is active.

1. Press  to suspend momentarily the playing track. Press  again to resume playing.
2. Press  button to skip forward to next track and  to skip backward to previous track.

Note:

-  and  /  buttons may not work with some of the players in your Bluetooth source.

TROUBLESHOOTING GUIDE

Check the followings before requesting service		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC plug not connected to the wall outlet	Plug to the wall outlet.
No sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume) + button
	The connected device is not in playback mode	Play the music/movie in the connected device as usual and make sure the volume level of it is in high level
	Input source incorrect	Press the SOURCE button repeatedly to set the input source to the desired mode
No response from AUX IN1/ AUX IN 2 source	The unit is set to the wrong mode	Set to AUX IN 1 mode(indicator turns Indigo) and AUX IN 2 mode (indicator turns Light Blue)
	The AUX IN source is locked up	Wake up the AUX IN source
Remote not working	The battery is consumed	Replace with new battery
Bluetooth reception failure	The unit is paired with another Bluetooth device	Turn off the functionality of other devices that are paired with the unit
		Clear out the pairing list on your Bluetooth device and reconnect
No sound from Bluetooth source	The unit is set to wrong mode	Set the unit to Bluetooth mode
	Audio cable is connected	Disconnect the audio cable

SPECIFICATIONS

Power source:	AC 240V~ 50Hz
Power Consumption:	40W RMS
Radio Coverage:	FM 87.5 -108.0 MHz
Bluetooth working distance:	Up to 10 meters measured in open space. (Wall and structures may affect range of device)
Remote working distance:	Up to 5 meters

LENOXX

Lenoxx Electronics Aust. Pty Ltd
Importers and Wholesalers of Electronics & Toys
6 Oban court, Laverton North. Victoria. 3026
ABN: 97 844 321 851
PH: 03 9267 2100
FAX: 03 9267 2199
For service call: 1300 666 848
Email: lenoxx@lenoxx.com.au
www.lenoxx.com.au